

Sorter V2 bin - THIRD size, right-back - hand cutting template

Makes one bin. A third-size layer takes six of these, plus six left and six centre bins, which have their own templates.

You need

A paper printer - A4 paper, or thin card stock, for the template - cardboard
4, 5 or 6 mm - sharp knife - metal ruler - ruler or tape measure - sticky
tape - hot glue gun - a pin

1. Print every sheet at 100%.

Set Scale to 100% or Actual size, not Fit to Page. Thin card stock lasts longer than paper.

2. Once printed, measure the bar at the foot of each page.

It must be 100 mm. If it is not, the print is scaled: fix the setting and print again.

3. Tape the sheets together.

Each overlap carries crosses, marked V1.1, H1.2 and so on. The same cross is on both sheets. Lay one sheet over the other so the crosses line up exactly, then tape. Columns first, then rows.

4. Measure the thickness of the cardboard.

Three outlines are printed on top of each other, one per thickness. Solid is 4 mm, dashed is 5 mm, dash-dot is 6 mm, each tagged along its length. Follow the one that matches, ignore the other two.

5. Line the arrow up with the flutes, then trace.

The long double-headed arrow marked FLUTES is the grain line. Turn the template until it runs the same way as the corrugations in your cardboard. Tape it down, draw round your line, then lift it off. Do not cut against the paper: you need this template a dozen times.

6. Cut the outline.


This bin has no toothed edge and no seam slots, so the outline is the whole of it. The heavy line is the last fold: score it, or cut along it and tape that joint.

7. Score the folds.

The grey lines are folds. Score the face that will be INSIDE the bin, cutting the inner liner only, then fold towards the score. At 6 mm take several light passes. Test on an offcut first.


8. Fold and glue.

Hot glue the corners. The folds on their own do not hold in corrugated cardboard.

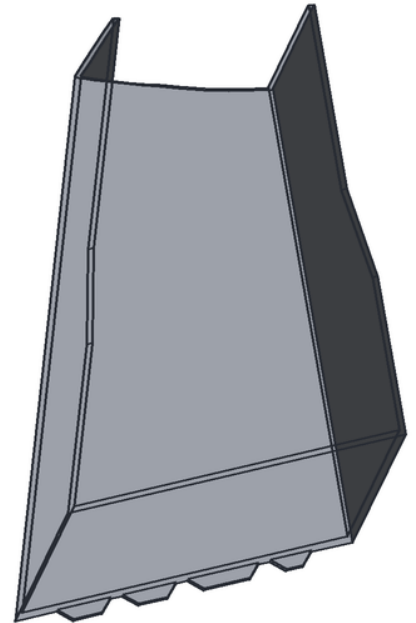

Sheet layout: 2 sheets, 2 across x 1 down

sheet 1	sheet 2
---------	---------

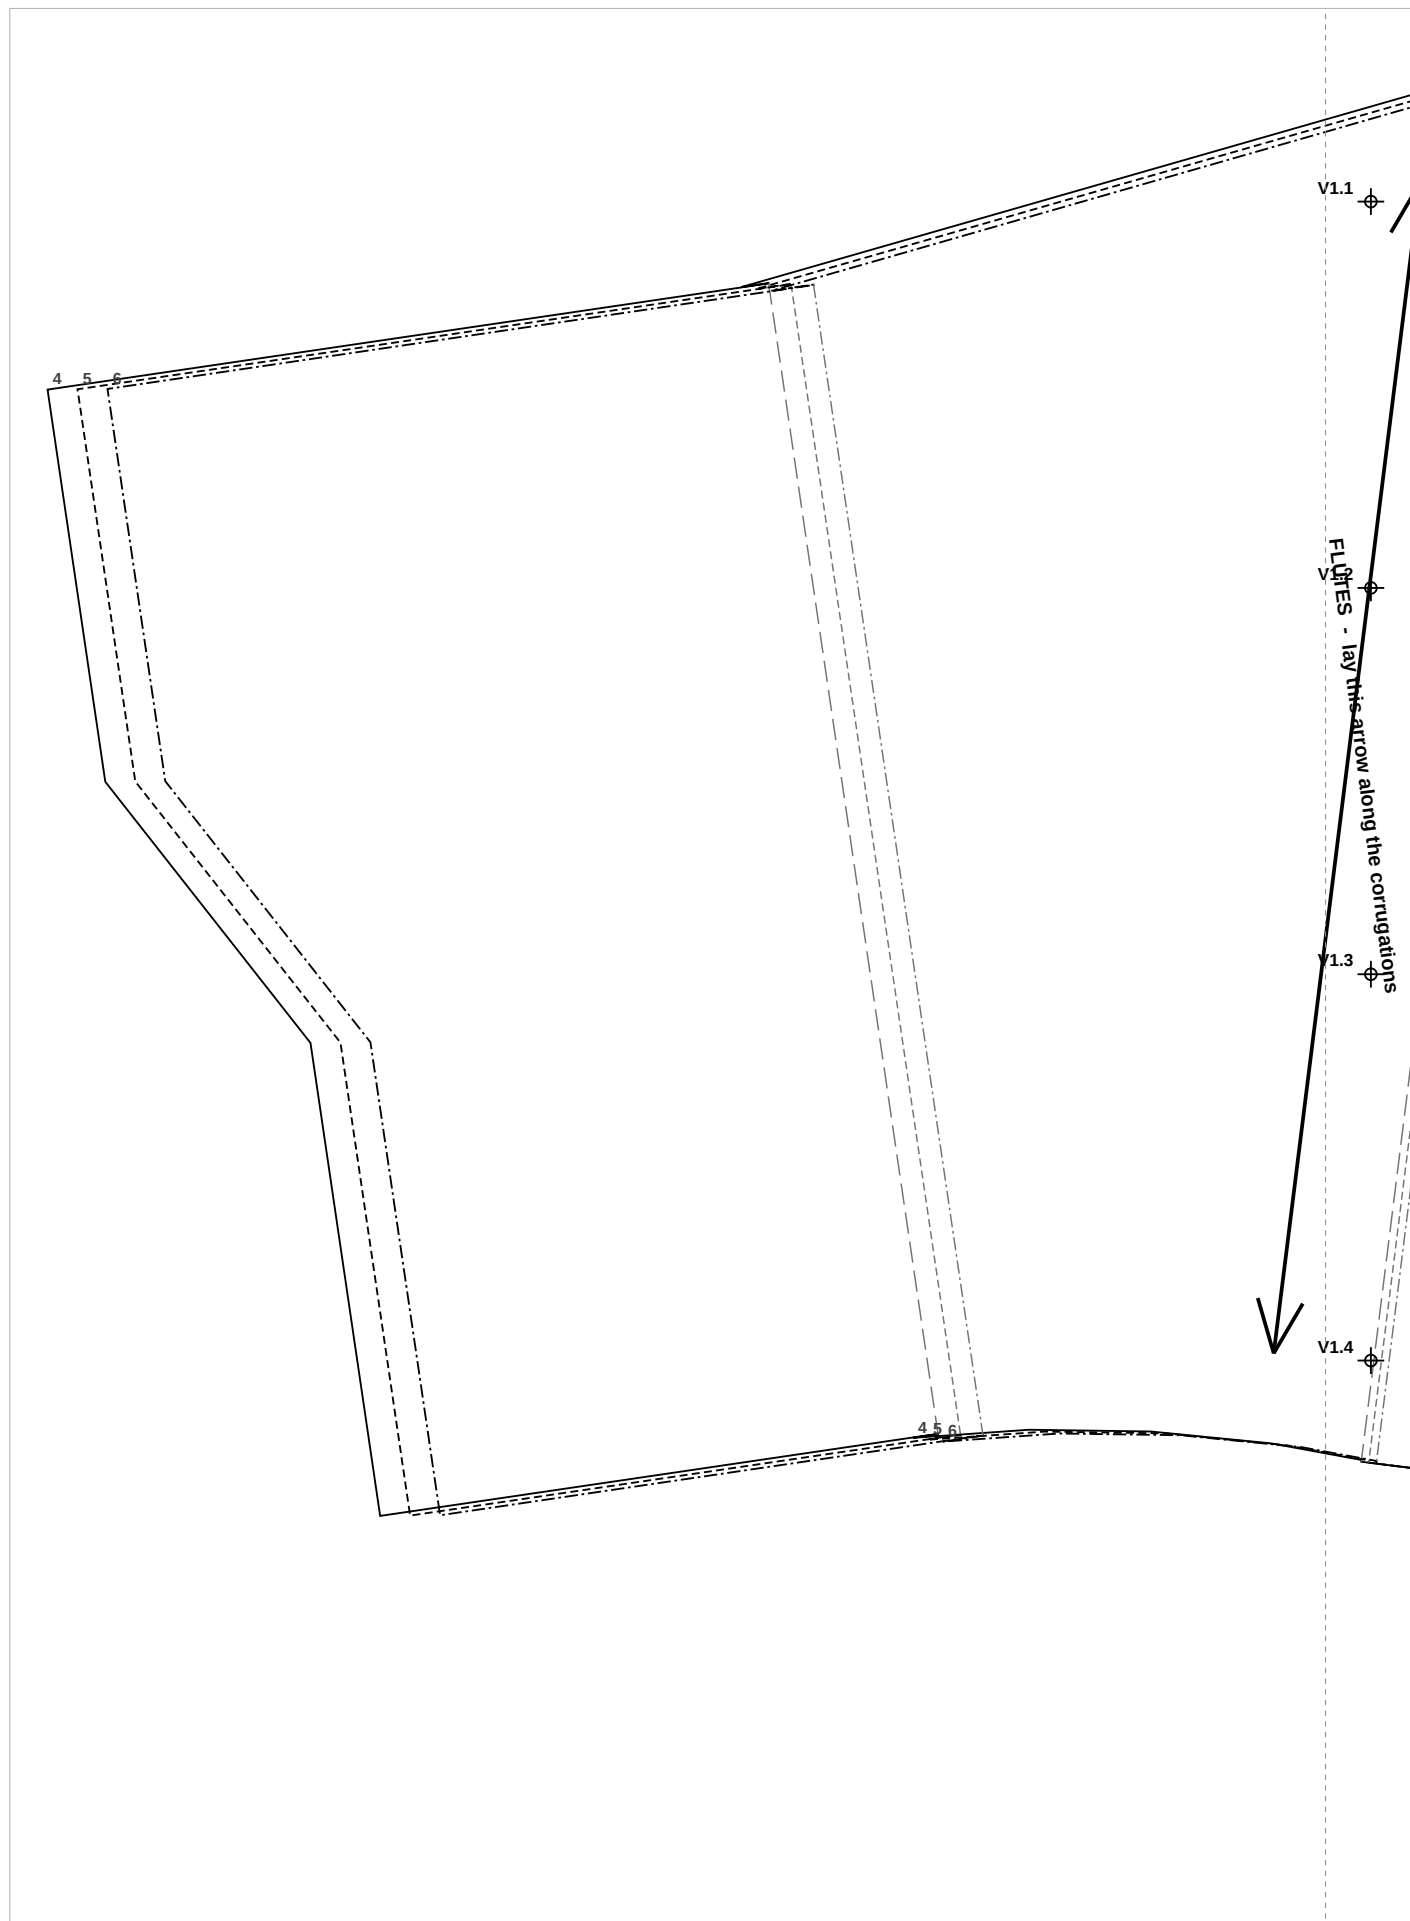


PRINT AT 100% / ACTUAL SIZE. Do not use Fit to Page or Shrink to Fit.

Not a mirror of any other bin. Among the five bins only the two HALF bins are a mirror pair.

SCORING: score the face that will be INSIDE the bin, then fold towards the score.

Dry-fold the paper first: narrow end towards the middle of the machine.

10 20 30 40 50 60 70 80 90 100 this bar must measure 100 mm

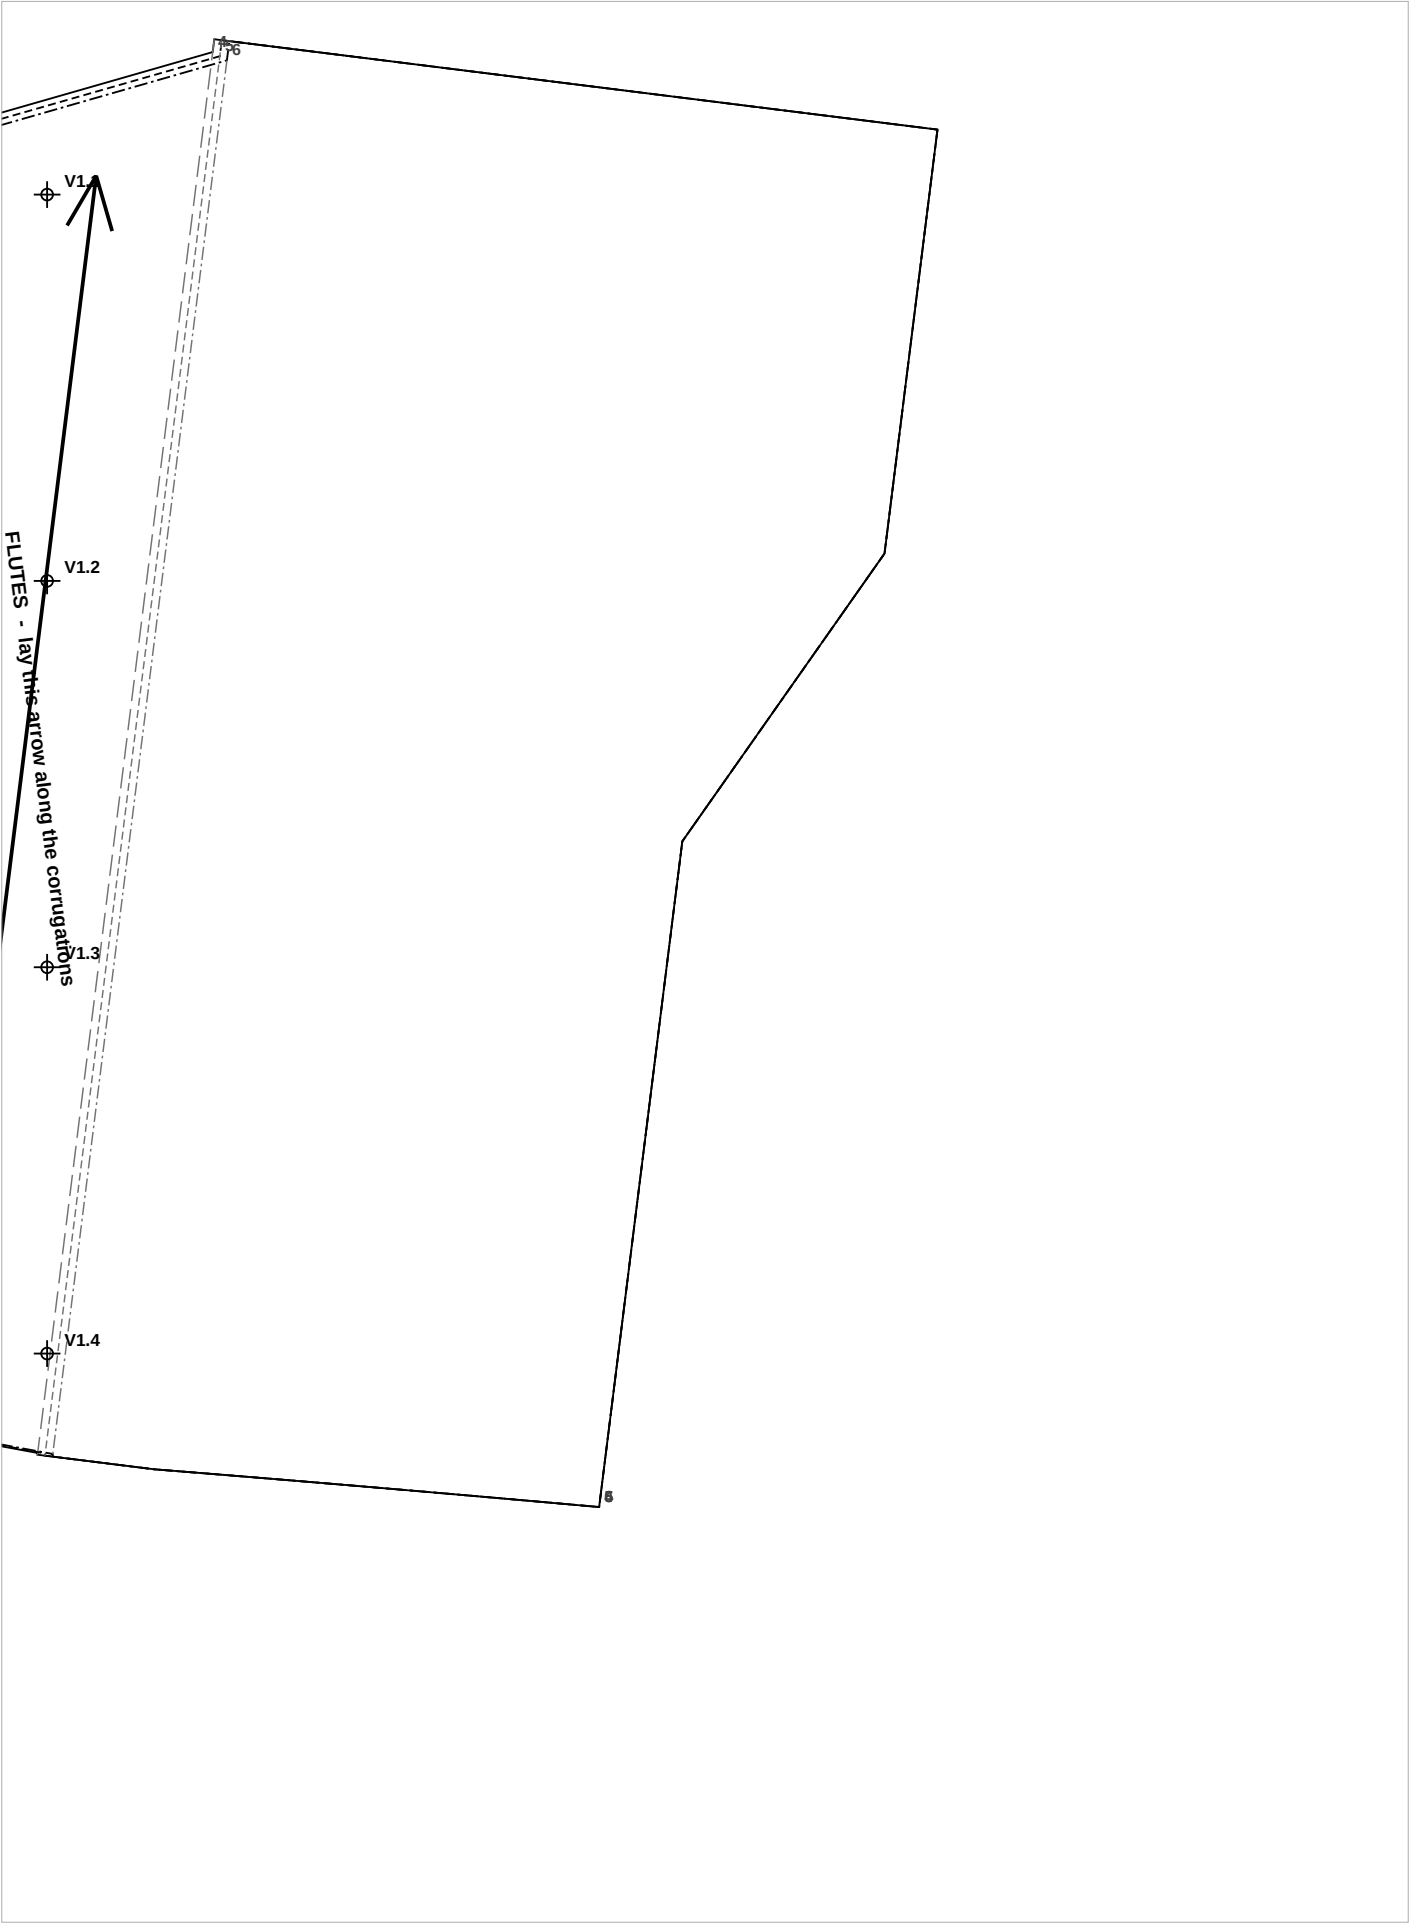

PRINT AT 100% / ACTUAL SIZE. Do not use Fit to Page or Shrink to Fit.

Not a mirror of any other bin. Among the five bins only the two HALF bins are a mirror pair.

SCORING: score the face that will be INSIDE the bin, then fold towards the score.

Dry-fold the paper first: narrow end towards the middle of the machine.

